

| Part No. | Description |
|----------|-------------------|
| 00.04 | O-Ring |
| 00.12 | O-Ring |
| 00.13 | O-Ring |
| 00.14 | O-Ring |
| 00.26 | O-Ring |
| 00.27 | O-Ring |
| 00.35 | O-Ring |
| 01.21.1 | Gasket |
| 01.21.3 | Gasket |
| 01.29 | O-Ring |
| 01.33 | O-Ring |
| 04.08 | Screw |
| 04.12 | Screw |
| 04.16 | Screw |
| 04.20 | Screw |
| 04.35 | Screw |
| 07.30 | Hex. bar wrench |
| 09.02 | Elastic ring |
| 09.14 | Washer |
| 14.18.1 | Pin |
| 17.10 | Air Plug 1/4" |
| 20.00 | Body |
| 22.07 | Head |
| 24.00 | Silencer |
| 25.04.1 | Exhaust deflector |
| 26.07 | Cylinder |
| 26.00 | Gasket |
| 30.07.3 | Piston |
| 32.05 | Bumper |
| 39.00 | Exhaust gasket |
| 40.04.2 | Valve ass'y |
| 45.04 | Ring |
| 50.03 | Plunger |
| 52.02 | Inlet cap |
| 54.04 | Plunger |
| 55.06.1 | Bush |
| 72.03.1 | Support |
| 72.06 | Slider stop |
| 76.04 | Pin |
| 76.14 | Pin |
| 76.45 | Pin |
| 80.08 | Trigger |
| 81.09 | Trigger |
| 81.15 | Trigger |
| 90.07 | Spring |
| 90.10 | Spring |
| 91.08 | Spring |
| 92.01X | Spring |
| 93.07 | Spring |
| 22.00.50 | Driver |
| 53.05.80 | Magazine |
| 62.05.80 | Slider |
| 70.00.80 | Pusher |
| 81.00.80 | Nose |
| 91.01.80 | Nose plate |
| D01 | Oiler |

